

C1 Lavatory Faucet Installation Instructions

C1

- If mounting through a countertop the three holes needed should be 1 1/4" to 1 3/8" maximum in diameter.
- Maximum deck thickness is 1 1/2".
- Hole spread is adjustable from 8" minimum to 16" maximum.
- A few simple tools will make the installation easier: Basin wrench, small crescent wrench, pliers and Teflon tape.
- Read entire instructions before installing

Step 1- Install spout assembly **C1-SPT** through the center hole in the sink making sure that the spout base ring **C1-SR** is in place between the spout base and the countertop.

Latex caulk or silicone sealant should be used under the spout base ring and both of the hot and cold escutcheons **C1-ESC** (never use oil based plumbers putty as this may damage the decorative finish).

➤ **Note:** It may be necessary to put one of the 1/2" female ends of the supply lines **C1-SUP** through the center hole, one at a time as they both may not fit through together.

Step 2- Slide the black collar seal washer **C1-COLW** over the two mounting studs **C1-STUD** and then the metal collar **C1-COL**

Screw the two mounting the lock nuts **C1-NUT** on the bottom of the mounting studs **C1-STUD** (make sure that open end of collar seal washer and metal collar have the open end facing towards the front, as the pop-up rod **C1-ROD** will go through the small hole in the back). Screw the mounting nuts all the way up the mounting studs until they are tight against the metal collar washer and tighten with a wrench.

Step 3- Installing the hot and cold-water valves:


3A- Remove the handle **C1-HNDL** off both of the hot and cold valves by loosening the two Allan screws (with black Allan wrench provided) and pull up on the handle to remove.

3B- Unscrew the escutcheons **C1-ESC** off both of the valves.

3C- Unscrew the brass valve "top" lock nut **C1-LNUT** and remove.

3D- Push the hot valve assembly **C1-LVH** "with the H marking" up from underneath the sink on the left hole of the sink as you are facing it (the black seal washer **C1-WG** and the white washer **C1-WN** go between the bottom brass locknut and the countertop).

3E- The correct distance from the countertop to the top of the ceramic cartridge is 2". This will allow for the proper height of the escutcheon and handle.

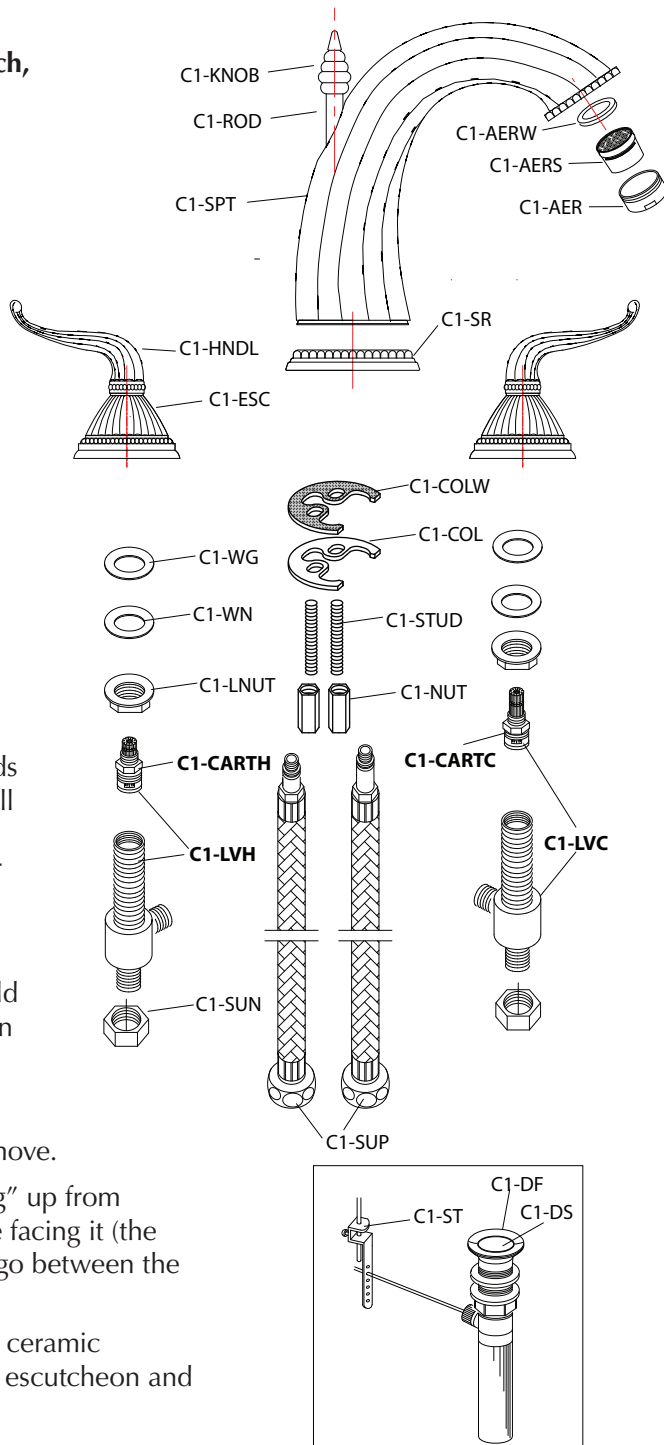

SEE STEP 6
Instructions for Pop Up Assembly

IMPORTANT CLEANING NOTICE

To maintain your faucet use
only mild soap and water

Never use acids, harsh abrasives or detergents

Giagni
collection

for more information call

888.560.5222 FAX 888.560.8727 Monday - Sunday 8:00am to 6:00pm EST

C1

C1 Lavatory Faucet Installation Instructions

C1

3F- Screw the top brass lock nut **C1-LNUT** (make sure that the 1/2" male side outlets on both the valve bodies are pointing inwards towards the center spout as this is where the two supply lines **C1-SUP** from the spout will attach later) and tighten the brass nut.

3G- Repeat the same procedure for the cold valve **C1-LVC** on the right side of the sink.

Step 4- Connect the two female ends of the supply lines **C1-SUP** to the side outlets on the hot and cold valves.

Step 5- Install both of the escutcheons back onto the valve bodies and hand tighten. Install both of the handles back onto the broaching of the ceramic cartridges and tighten the allen screws (the angle of the handles can be adjusted by pulling of the handle and moving one notch at a time on the broach, with the ceramic cartridge in the off position).

Step 6- Pop-up sink drain: see "Installation Instructions for Pop-up Drain Assembly".

Step 7- Install water supply lines (not supplied) from the shut off valves under the sink to the bottom inlets of the hot and cold valves.

Step 8- Unscrew the aerator **C1-AER** from the spout.

Step 9- Open both of the hot and cold shut off valves under the sink.



Step 10- Turn both of the hot and the cold handles on and let the faucet run for about two minutes, to flush the lines of any debris that may come from the existing plumbing. If a drip from the spout aerator should occur after completion, there might be debris inside the ceramic cartridge that is not allowing it to close completely (see bottom note for removal of ceramic cartridges and flush out any debris at another water source).

Step 11- Replace the aerator **C1-AER**.

Step 12- Turn on both of the hot and cold handles again to check all connections under the sink for leaks.

➤ **Note:** If the ceramic cartridges **C1-CARTH** (hot) or **C1-CARTC** (cold) should ever need cleaning or replacing, turn off both of the shut off valves under the sink. Remove the handle and escutcheon, then remove the ceramic cartridge with a crescent wrench (not pliers) by unscrewing counter clockwise.

Replace the ceramic cartridge, escutcheon and handle assembly in reverse order.

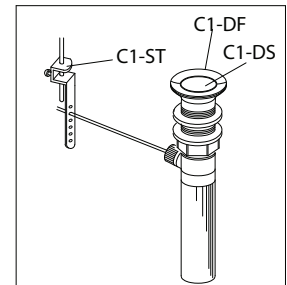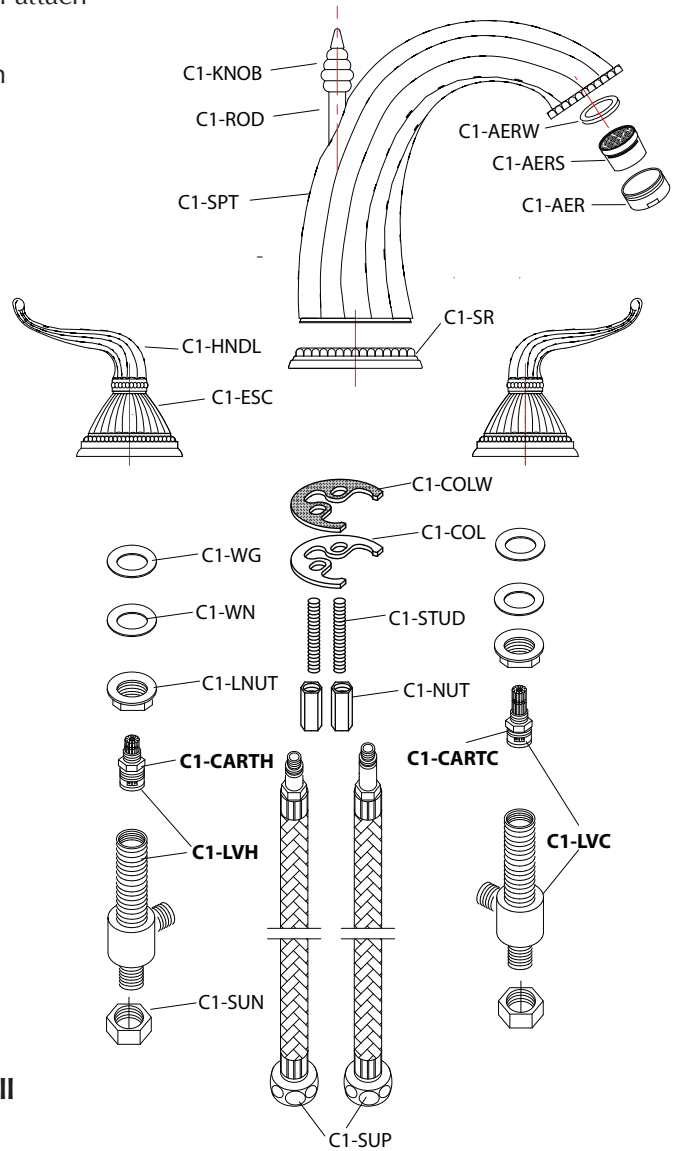

SEE STEP 6
Instructions for Pop Up Assembly

IMPORTANT CLEANING NOTICE

To maintain your faucet use only mild soap and water

Never use acids, harsh abrasives or detergents



for more information call

888.560.5222 FAX 888.560.8727 Monday - Sunday 8:00am to 6:00pm EST

C1